



# **Operator's Manual**

**Avant<sup>®</sup> 9600**

**Digital Pulse Oximeter**



**English**

**CAUTION: Federal law (USA) restricts this device to sale by or on the order of a licensed practitioner.**



Consult Instructions for Use.

Nonin® reserves the right to make changes and improvements to this manual and the products it describes at any time, without notice or obligation.

**Nonin Medical, Inc.**  
13700 1st Avenue North  
Plymouth, Minnesota 55441-5443, USA

+1 (763) 553-9968  
(800) 356-8874 (USA and Canada)  
Fax: +1 (763) 553-7807  
E-mail: [info@nonin.com](mailto:info@nonin.com)

**Nonin Medical B.V.**  
Prins Hendriklaan 26  
1075 BD Amsterdam, Netherlands

+31 (0)13 - 79 99 040 (Europe)  
Fax: +31 (0)13 - 79 99 042  
E-mail: [infointl@nonin.com](mailto:infointl@nonin.com)

[nonin.com](http://nonin.com)



MPS, Medical Product Service GmbH  
Borngasse 20  
D-35619 Braunfels, Germany

References to “Nonin” in this manual imply Nonin Medical, Inc.

Nonin, Avant, PureLight, and nVISION are registered trademarks or trademarks of Nonin Medical, Inc. MicroSoft® and Windows® are registered trademarks of Microsoft Corporation.

© 2014 Nonin Medical, Inc.  
7936-001-03

# Contents

<b>Indications for Use .....</b>	<b>1</b>
Contraindications .....	1
Warnings .....	1
Cautions .....	2
<b>Guide to Symbols .....</b>	<b>4</b>
<b>Displays, Indicators, and Controls.....</b>	<b>5</b>
%SpO <sub>2</sub> Display .....	5
Pulse Rate Display .....	5
Numeric LEDs .....	5
Indicators and Icons .....	6
Front Panel Buttons.....	7
<b>Installing the Batteries .....</b>	<b>9</b>
<b>Operating the Avant 9600 .....</b>	<b>10</b>
Factory Default .....	10
User-Defined Defaults .....	10
Operator Functions.....	11
Basic Functions.....	11
User-Defined Defaults .....	12
Advanced Functions .....	12
Option Switches.....	13
Nurse Call Feature .....	14
Alarms and Limits .....	16
High Priority Alarms.....	16
Medium Priority Alarms .....	16
Watchdog Alarms .....	17
Informational Tones.....	17
Reviewing Setting and Changing Alarm Limits.....	17
SpO <sub>2</sub> and/or Pulse Alarm Limits .....	17
Pulse and Alarm Volumes.....	17
Serial Output Rates .....	18
Silencing Alarms.....	18
Recalling Previous Settings.....	18
Locked and Unlocked Alarms .....	19
Patient Security Mode .....	19
Viewing and Changing Patient Security Mode.....	19
Error Codes .....	20
Clearing Error Codes 06, 08, or 10 .....	20
<b>Memory and Data Output Features .....</b>	<b>21</b>
Memory Features .....	21
Using nVISION Data Management Software .....	21
Serial Patient Data Outputs .....	22

## Contents (Continued)

Print-on-Demand Output.....	22
Real-Time Patient Data Output.....	22
Connecting the Device into a Medical System.....	23
Using with Philips VueLink .....	23
Connecting to the VueLink Module.....	23
Patient Alarms .....	24
Equipment Alarms .....	24
<b>Care and Maintenance .....</b>	<b>26</b>
Cleaning the Model 9600 .....	26
<b>Parts and Accessories .....</b>	<b>27</b>
<b>Troubleshooting .....</b>	<b>28</b>
<b>Service, Support, and Warranty .....</b>	<b>30</b>
Warranty.....	30
<b>Technical Information .....</b>	<b>32</b>
Manufacturer's Declaration .....	32
Equipment Response Time.....	36
Testing Summary .....	37
SpO <sub>2</sub> Accuracy Testing .....	37
Pulse Rate Motion Testing.....	37
Low Perfusion Testing .....	37
Principles of Operation .....	37
Specifications .....	38
Oximeter .....	38
System.....	39
Nurse Call .....	40

## Figures

Figure 1. Avant 9600 Front and Back View .....	5
Figure 2. Installing the Batteries .....	9
Figure 3. Monitor Rear View.....	15
Figure 4. Avant 9600 Connection to Philips Monitor .....	24

## Tables

Table 1. Symbols .....	4
Table 2. Factory Default Settings.....	10
Table 3. Basic Functions.....	11
Table 4. User-Defined Defaults.....	12
Table 5. Advanced Functions .....	12
Table 6. Option Switches .....	14
Table 7. High Priority Alarms .....	16
Table 8. Medium Priority Alarms.....	16
Table 9. Error Codes.....	20
Table 10. Electromagnetic Emission.....	32
Table 11. Electromagnetic Immunity.....	33
Table 12. Guidance and Manufacturer's Declaration—Electromagnetic Immunity..	34
Table 13. Recommended Separation Distances .....	35



# Indications for Use

The Nonin® Avant® 9600 Digital Pulse Oximeter is a portable, tabletop device indicated for use in simultaneously measuring, displaying, and recording functional oxygen saturation of arterial hemoglobin (SpO<sub>2</sub>) and pulse rate of adult, pediatric, infant, and neonatal patients in hospitals, medical facilities, home care, and subacute environments. It may also be used in patient transport, sleep laboratories, and EMS environments. The Avant 9600 is intended for continuous monitoring and/or spot-checking of patients during both motion and no-motion conditions, and for patients who are well or poorly perfused.

## Contraindications

Do not use this device in an MR environment.
This device is not defibrillation proof per IEC 60601-1.
Do not use this device in an explosive atmosphere.

## Warnings

This device is intended only as an adjunct in patient assessment. It must be used in conjunction with other methods of assessing clinical signs and symptoms.
Inspect the sensor application site at least every 6 to 8 hours to ensure correct sensor alignment and skin integrity. Patient sensitivity to sensors may vary due to medical status or skin condition.
Avoid excessive pressure to the sensor application site as this may cause damage to the skin beneath the sensor.
The device must be able to measure the pulse properly to obtain an accurate SpO <sub>2</sub> measurement. Verify that nothing is hindering the pulse measurement before relying on the SpO <sub>2</sub> measurement.
Operation of this device below the minimum amplitude of 0.3% modulation may cause inaccurate results.
General operation of this device may be affected by the use of an electrosurgical unit (ESU).
The use of accessories other than those specified in the Parts and Accessories List may result in increased electromagnetic emission and/or decreased immunity of this device.
This device should not be used adjacent to or stacked with other equipment. If adjacent or stacked use is necessary, the device should be observed carefully to verify normal operation.
To avoid patient injury, use only Nonin-branded PureLight® pulse oximeter sensors. These sensors are manufactured to meet the accuracy specifications for Nonin pulse oximeters. Using other manufacturers' sensors can result in improper pulse oximeter performance.
To prevent improper performance and/or patient injury, verify compatibility of the monitor, sensor(s), and accessories before use.
No modifications to this device are allowed as it may affect device performance.
Do not use a damaged sensor. If the sensor is damaged in any way, discontinue use immediately and replace the sensor.
Verify all alarm settings and limits during system startup to ensure that they are set as intended.

## Warnings (Continued)

A hazard can exist if different presets are used on multiple 9600 monitors in one care area.
Do not use the device in or around water or any other liquid when the AC power supply is used.
As with all medical equipment, carefully route patient cables and connections to reduce the possibility of entanglement, strangulation, or injury to the patient.
Use the device only with Nonin-specified power supplies.
The device's Nurse Call feature should not be used as the primary source of alarm notification.
All parts and accessories connected to the serial port of the device must be certified according to at least IEC 60950 or UL 1950 for data-processing equipment.
The battery pack must be installed at all times while the device is operating, even when operating on AC power. The audible alarms and memory will not function if batteries are removed from the device.
To comply with relevant product safety standards, ensure that all alarm volumes are set appropriately and are audible in all situations.

## Cautions

When mounting the monitor to a mobile pole, mounting the monitor higher than 1.5 meters (5 feet) or mounting more than 2 kilograms (4.5 pounds) of equipment onto the pole may result in tipping, damage to the equipment, or injury.		
Review all limits to ensure they are appropriate for the patient.		
Setting alarm limits to extremes can render the alarm system useless.		
<p>This device is designed to determine the percentage of arterial oxygen saturation of functional hemoglobin. Factors that may degrade pulse oximeter performance or affect the accuracy of the measurement include the following:</p> <table><tr><td><ul style="list-style-type: none"><li>- excessive ambient light</li><li>- excessive motion</li><li>- electrosurgical interference</li><li>- blood flow restrictors (arterial catheters, blood pressure cuffs, infusion lines)</li><li>- moisture in the sensor</li><li>- improperly applied sensor</li><li>- incorrect sensor type</li></ul></td><td><ul style="list-style-type: none"><li>- poor pulse quality</li><li>- venous pulsations</li><li>- anemia or low hemoglobin concentrations</li><li>- cardiogreen and other intravascular dyes</li><li>- carboxyhemoglobin</li><li>- methemoglobin</li><li>- dysfunctional hemoglobin</li><li>- artificial nails or fingernail polish</li></ul></td></tr></table>	<ul style="list-style-type: none"><li>- excessive ambient light</li><li>- excessive motion</li><li>- electrosurgical interference</li><li>- blood flow restrictors (arterial catheters, blood pressure cuffs, infusion lines)</li><li>- moisture in the sensor</li><li>- improperly applied sensor</li><li>- incorrect sensor type</li></ul>	<ul style="list-style-type: none"><li>- poor pulse quality</li><li>- venous pulsations</li><li>- anemia or low hemoglobin concentrations</li><li>- cardiogreen and other intravascular dyes</li><li>- carboxyhemoglobin</li><li>- methemoglobin</li><li>- dysfunctional hemoglobin</li><li>- artificial nails or fingernail polish</li></ul>
<ul style="list-style-type: none"><li>- excessive ambient light</li><li>- excessive motion</li><li>- electrosurgical interference</li><li>- blood flow restrictors (arterial catheters, blood pressure cuffs, infusion lines)</li><li>- moisture in the sensor</li><li>- improperly applied sensor</li><li>- incorrect sensor type</li></ul>	<ul style="list-style-type: none"><li>- poor pulse quality</li><li>- venous pulsations</li><li>- anemia or low hemoglobin concentrations</li><li>- cardiogreen and other intravascular dyes</li><li>- carboxyhemoglobin</li><li>- methemoglobin</li><li>- dysfunctional hemoglobin</li><li>- artificial nails or fingernail polish</li></ul>	
The device may not work when circulation is reduced. Warm or rub the finger, or reposition the device.		
In some circumstances, the device may interpret motion as good pulse quality. Minimize patient motion as much as possible.		
Do not autoclave or immerse this device in liquid or use caustic or abrasive cleaning agents.		
A functional tester cannot be used to assess the accuracy of a pulse oximeter monitor or sensor.		

## Cautions (Continued)

This equipment complies with IEC 60601-1-2 for electromagnetic compatibility for medical electrical equipment and/or systems. This standard is designed to provide reasonable protection against harmful interference in a typical medical installation. However, because of the proliferation of radio-frequency transmitting equipment and other sources of electrical noise in healthcare and other environments, it is possible that high levels of such interference due to close proximity or strength of a source might disrupt the performance of this device. Medical electrical equipment needs special precautions regarding EMC, and all equipment must be installed and put into service according to the EMC information specified in this manual.

Portable and mobile RF communications equipment can affect medical electrical equipment.

Follow local, state and national governing ordinances and recycling instructions regarding disposal or recycling of the device and device components, including batteries.

In compliance with the European Directive on Waste Electrical and Electronic Equipment (WEEE) 2002/96/EC, do not dispose of this product as unsorted municipal waste. This device contains WEEE materials; please contact your distributor regarding take-back or recycling of the device. If you are unsure how to reach your distributor, please call Nonin for your distributor's contact information.

If the device fails to respond as described, discontinue use until the situation is corrected by qualified personnel.

This device is a precision electronic instrument and must be repaired by trained Nonin personnel only. Field repair of the device is not possible. Do not attempt to open the case or repair the electronics. Opening the case may damage the device and void the warranty.

To prevent potential loss of monitoring, do not use ear clip or reflective sensors on pediatric or neonatal patients.

This product complies with ISO 10993.












Radios and cell phones or similar devices can affect the equipment and must be kept at least 2 meters (6.5 feet) away from equipment.

Failure of a network data coupling (serial cable/connectors/wireless connections) will result in loss of data transfer.

## Guide to Symbols


This table describes the Nonin symbols located on the Avant 9600. See Section titled Displays, Indicators and Controls for detailed information about functional symbols.

**Table 1: Symbols**

Symbol	Description
	Consult Instructions for Use
	Follow Instructions for Use
	Type BF Applied Part (Patient isolation from electrical shock).
	UL Mark for Canada and the United States with respect to electric shock, fire, and mechanical hazards only in accordance with UL 60601-1 and CAN/CSA C22.2 No. 601.1.
	CE Marking indicating conformance to IEC directive No. 93/42/EEC concerning medical devices.
<b>SN</b>	Serial Number (located under the back cover).
	Signal Output (located on back of device).
	Indicates separate collection for electrical and electronic equipment (WEEE).
	Alarm Call (located on back of device).
	Authorized Representative in the European Community.
	Manufacturer
<b>IP22</b>	Protected against vertically falling water drops when enclosure is tilted up to 15 degrees and against access to hazardous parts with a finger per IEC 60529.
<b>%SpO<sub>2</sub></b>	%SpO <sub>2</sub> Display
	Pulse Rate Display

## Displays, Indicators, and Controls

This section describes the displays, indicators, and controls for the Avant 9600.

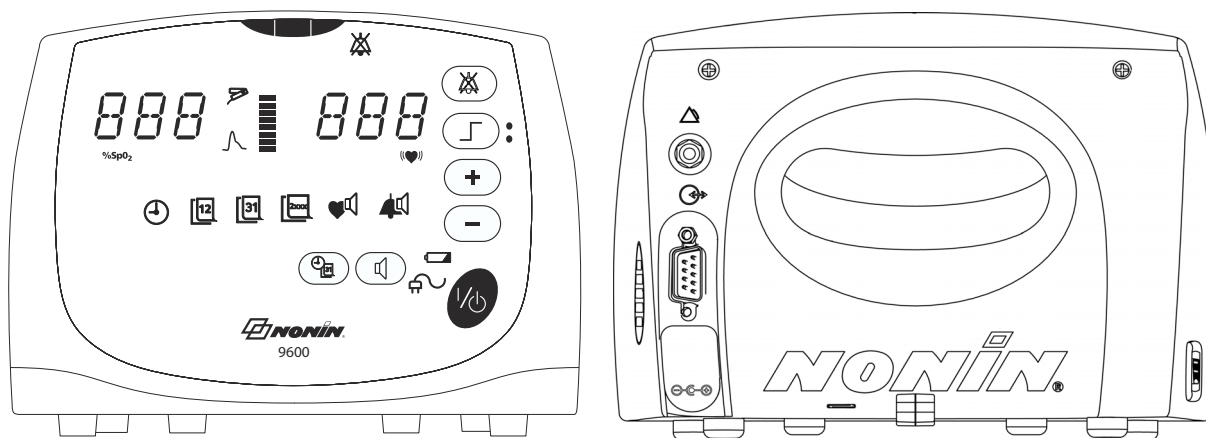

**Figure 1: Avant 9600 Front and Back View**

### **%SpO<sub>2</sub> Display**

The %SpO<sub>2</sub> Display is located on the front panel of the Avant 9600 and is identified by the %SpO<sub>2</sub> symbol. This display shows blood oxygen saturation, from 0 to 100 percent. The numeric LEDs blink during SpO<sub>2</sub> alarm conditions.

---

**NOTE:** LED means “light-emitting diode”.

---

### **Pulse Rate Display**

The Pulse Rate Display, located on the front panel of the Avant 9600, is identified by the (♥) symbol. This display shows the pulse rate in beats per minute, from 18 to 300. The numeric display blinks during pulse rate alarm conditions.



### **Numeric LEDs**

Green numeric LEDs display %SpO<sub>2</sub> and pulse rate values. When setting the device, the LEDs also display values for alarm limits, volume, and date and time settings.

Red, rapidly blinking LEDs indicate a High Priority patient alarm. Values are displayed in amber when reviewing or changing limits.

## Indicators and Icons



### Main Alarm LED

Red, rapidly blinking LEDs indicate a High Priority patient alarm. Amber slowly blinking LEDs indicate a medium priority (equipment) alarm.



### Pulse Quality LED

This LED blinks to indicate an inadequate pulse signal. If there is a sustained period of inadequate pulse signals, this LED will illuminate solid.



### Pulse Oximeter Sensor LED

The Pulse Oximeter Sensor LED indicates when a sensor has become disconnected, has failed, is misplaced or is not compatible with this monitor.



### Pulse Strength Bar Graph LED

This 8-segment tricolor bar graph indicates pulse strength as determined by the oximeter. The bar graph changes color based upon the strength of the pulse. The color and height of the Pulse Strength Bar Graph is proportional to the pulse amplitude. For low pulse amplitude, the device goes into High Priority Alarm mode:

**Green** = a good pulse strength

**Amber** = a marginal pulse strength

**Red** = an inadequate pulse strength, high priority alarm

The Pulse Strength Bar Graph LED also indicates the battery capacity in 12% increments in green. Amber represents the depleted capacity of the battery and green indicates the available battery capacity.



### Alarm Silence LED

This amber LED indicates that the audible alarm is silenced for two minutes when it blinks. When lit solid, the Alarm Silence LED indicates that the audible alarm volume is set to less than 45 dB.



### Time, Month, Day, and Year LEDs

These amber LEDs indicate that the Avant 9600's *Time*, *Month*, *Day*, or *Year* displays can be reviewed or adjusted using the Plus (+) and Minus (-) buttons.



### Pulse Volume LED

This amber LED indicates that the Pulse Volume can be reviewed or adjusted using the Plus (+) and Minus (-) buttons.



### Alarm Volume LED

This amber LED indicates that the Alarm Volume can be reviewed or adjusted using the Plus (+) and Minus (-) buttons.



### AC Power Supply LED

This green LED is displayed when an external power supply is providing power to the Avant 9600. Any time this LED is displayed, the battery pack is charging.

---

**NOTE:** When the external power supply is disconnected, the device automatically switches to battery power without loss of functionality.

---



### Battery LED

This amber LED indicates marginal battery capacity when blinking. When solidly lit, the LED indicates that the battery pack is not installed. *This LED does not indicate that the device is running on battery power.* New battery packs must complete one charge/discharge/recharge cycle before the Battery LED displays the actual capacity.

**WARNING:** The battery pack must be installed at all times while the device is operating—even when operating on AC power. The audible alarms and memory will not function if batteries are removed from the device. **DO NOT** use this device without batteries.

## Front Panel Buttons



### ON/STANDBY

- Press Once: Turns the device on
- Hold 1 second: Turns the device off
- Hold 5 seconds: Turns the device off when in Patient Security mode
- Press momentarily while the unit is on:
  - Indicates the battery capacity in green, in 12% increments for 3 seconds
  - Initiates Print-on-Demand feature
  - Records event marker



### Time/Date

This button displays the time and date. Year, month, day, hour, and minute can be set using the Plus (+) and Minus (-) buttons.

**Volume**

This button allows users to set and review the pulse or alarm volume, indicated by the designated LED.

**Alarm Silence**

- Engages the 2-minute alarm silence automatically at start-up
- Changes the alarm from silenced to audible
- Silences the alarm for 2 minutes
- Cancels audible and visual alarms, when in Locked Alarms mode, if the alarm condition is no longer present.

**Alarm Limits Button and Indicator**

The upper LED on the Alarm Limits button indicates the upper alarm limit, and the lower LED indicates the lower alarm limit for SpO<sub>2</sub> and heart rate measurements. The limits can be adjusted using the Plus (+) and Minus (-) buttons. Pressing the Alarm Limits buttons allows the user to manually advance through the alarm settings to review and set alarm limits. The limit values are displayed in amber.


**Plus Button and Minus Button**

The Plus (+) and Minus (-) buttons are used to adjust time, date, volume, upper and lower alarm limits, and data output settings. Pressing either button, when the device is not in program mode, adjusts the intensity of the LED displays.

# Installing the Batteries

**WARNING:** The battery pack must be installed at all times while the device is operating—even when operating on AC power. The audible alarms and memory will not function if batteries are removed from the device. Do not use this device without batteries.

**NOTE:** New battery packs must be fully charged before use; minimum recharge time is 4 hours.

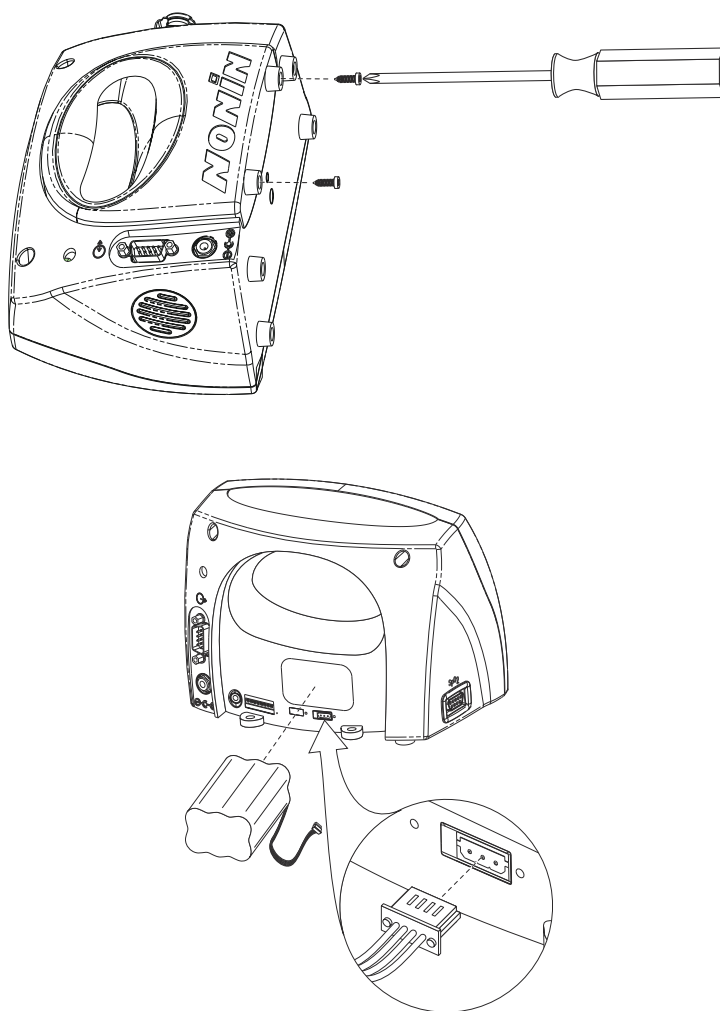

**Figure 2: Installing the Batteries**

**NOTES:**

- Contact Nonin to purchase or replace battery packs.
- Reposition the back cover carefully, and tighten the screws firmly. Do not over-tighten.

## Operating the Avant 9600

Press the ON/STANDBY button to perform the start-up (initialization) sequence. Verify that all LEDs, except the AC Power Supply LED, are illuminated and the unit beeps three times during the start-up sequence. Contact Nonin Technical Service for assistance.

Use the following procedure to verify that the pulse oximeter sensor is functioning properly.

1. Ensure that the Avant 9600 is on, and the sensor is connected to the monitor.
2. Apply the pulse oximeter sensor to the patient.
3. Verify that SpO<sub>2</sub> and pulse rate values are displayed, and the pulse strength bar graph LED is activated.

**WARNING: Verify all alarm settings and limits during system startup to ensure that they are set as intended.**

### Factory Default

In Factory Default, all adjustable alarm and volume parameters are set at their default values. Factory Default settings are in the table below:

**Table 2: Factory Default Settings**

Description	Default
SpO <sub>2</sub> Upper Alarm Limit	Off
SpO <sub>2</sub> Lower Alarm Limit	85%
Pulse Upper Alarm Limit	200 BPM
Pulse Lower Alarm Limit	50 BPM

Factory default is indicated by option switch 4 in the DOWN position. Refer to Options Switches Section.

### User-Defined Defaults









User-Defined Defaults (option switch 4 in the UP position), alarm limits and volume settings can be adjusted. To set user-defined defaults, enter limit settings for SpO<sub>2</sub> and pulse rate alarms, alarm volume and pulse rate volume. The device will not return to operating mode until all user-defined default limits are set. The programmed limits are the defaults until the device is turned off. To return to Factory Defaults, turn the device off, move Option Switch 4 to the Down position and turn the device on.

## Operator Functions

### Basic Functions

The Avant 9600 basic functions are described in the table below.










**Table 3: Basic Functions**

Function	Button	Instruction
Turns device on and off		Using the ON/STANDBY button: <ul style="list-style-type: none"> <li>• Press once (turns the device on)</li> <li>• Hold 1 second (turns the device off)</li> <li>• Hold 5 seconds (turns the device off when in Patient Security mode)</li> </ul>
Battery capacity		Briefly press the ON/STANDBY button while the device is on to display battery capacity.
Print-on-Demand		Press the ON/STANDBY button while the device is on.
Record an event marker		Press the ON/STANDBY button while the device is on.
Silence audible alarms		Press the Alarm Silence button.
Cancel locked alarms		Press the Alarm Silence button.
Display intensity (brightness)	 or 	Press the Plus or Minus button.

**NOTE:** When option switch 6 is in the DOWN position, the display intensity is automatically reduced when changing between AC and battery power.

## User-Defined Defaults

Table 4: User-Defined Defaults

Function	Button	Instruction
Set alarm limits	 then  or 	Press the Alarm Limits button to scroll through the Limits menu. Adjust alarm limits with the Plus or Minus button.
Set pulse and alarm volumes	 then  or 	Press the Volume button to select pulse or alarm volume. Adjust the selected volume with the Plus or Minus button.
Set time and date	 then  or 	Press the Time/Date button to scroll through the Time/Date menu. Adjust the time and date with the Plus and Minus buttons.

## Advanced Functions

Table 5: Advanced Functions












Function	Button	Action
Recall Previous Alarm Limits	 +  or  + 	<ul style="list-style-type: none"> <li>• <b>Press</b> and <b>hold</b> both the Alarm Limits and Minus buttons for three seconds.</li> <li>- or -</li> <li>• <b>Press</b> and <b>hold</b> both the Alarm Limits and ON/STANDBY buttons when turning on the device.</li> </ul>

Table 5: Advanced Functions (Continued)

Function	Button	Action
Memory Download and/or Clear Menu	 + 	<p>Nonin nVISION® software is required for memory download.</p> <ul style="list-style-type: none"> <li>• <b>Press and hold</b> the Time/Date button while turning on the device.</li> <li>• Follow the display prompts after the PLy bAC message clears.</li> </ul> <p><b>Note:</b> Memory cannot be cleared when the device is in Patient Security mode.</p>
Patient Security	 +  	<ul style="list-style-type: none"> <li>• <b>To access</b> Patient Security mode, press and hold both the Alarm Limits and Time/ Date buttons for 5 seconds. The current Patient Security mode displays in green on the Numeric LEDs:               <ul style="list-style-type: none"> <li>• “111 111” (enabled mode) displays when Patient Security is on.</li> <li>• “000 000” (disabled mode) displays when Patient Security is off.</li> </ul> </li> <li>• <b>To change</b> Patient Security mode, press the Volume button while the mode is displayed. The new Patient Security mode (Enabled or Disabled) is then displayed in amber on the Numeric LEDs.</li> </ul>
Serial Output	 + 	<ul style="list-style-type: none"> <li>• Simultaneously <b>press and hold</b> both the Time/Date and Volume buttons for three seconds. <b>Adjust</b> the serial output rate with the Plus and Minus buttons.</li> </ul>

## Option Switches

The Avant 9600 contains eight option switches located under the back cover (See “Installing the Batteries” for instructions on removing the back cover). **The device is supplied with all option switches in the DOWN position.**

**Table 6: Option Switches**

Switch	Function
Switch 1	Alarm Disable <b>Up</b> —Alarm volume may be disabled <b>Down</b> —Alarm volume cannot be set to zero (disabled)
Switch 2	Normal / Slow SpO <sub>2</sub> Averaging <b>Up</b> —Slow Averaging (8 beat exponential average) <b>Down</b> —Normal Averaging (4 beat exponential average)
Switch 3	Alarm Unlocked / Locked <b>Up</b> —Alarms Locked <b>Down</b> —Alarms Unlocked
Switch 4	Factory / User-Defined Defaults <b>Up</b> —User-Defined Defaults for Alarm Limits and Volume Settings <b>Down</b> —Factory Defaults for Alarm Limits and Volume Settings
Switch 5	US / International Date Format <b>Up</b> —International Date Format <b>Down</b> —US Date Format
Switch 6	Power Saving During Battery Use (Dims Display) <b>Up</b> —Power Saving Disabled <b>Down</b> —Power Saving Enabled
Switch 7	Nurse Call Output <b>Up</b> —Continuous <b>Down</b> —One second audible alarm at 60 second intervals
Switch 8	Serial Data Output <b>Up</b> —Fast SpO <sub>2</sub> and pulse rate output <b>Down</b> —SpO <sub>2</sub> and pulse rate output, as determined by the position of option switch 2

## Nurse Call Feature

The Avant 9600 features a nurse call circuit that can be connected to a facility nurse call system, allowing alarm conditions to be recognized at a central monitoring location and on the Avant 9600. Two switches located on the back of the 9600 under the back cover allow users to activate the Nurse Call feature.

Option switch 7 allows users to select the duration output of a signal. In the DOWN position, a one-second signal is output and repeated every 60 seconds when an audible alarm starts and will continue every 60 seconds until the alarm is silenced. In the UP position, the nurse call signal is active during the entire duration of an audible alarm.


---

**NOTE:** The Nurse Call feature overrides silenced alarms.

---

The Nurse Call Circuit Switch, located near the Option switch, allows users to select NO (Normally Open—the left position) or NC (Normally Closed—the right position). The hospital's nurse call system configuration will determine whether the Nurse Call Circuit Switch on the 9600 must be placed in the Normally Open (NO) or Normally Closed (NC).

Nurse Call Switch Position	Electrical State of Nurse Call Output		
	Nurse Call Not Active	Nurse Call Active	Standby Mode
Right	Open	Closed	Closed
Left	Closed	Open	Open

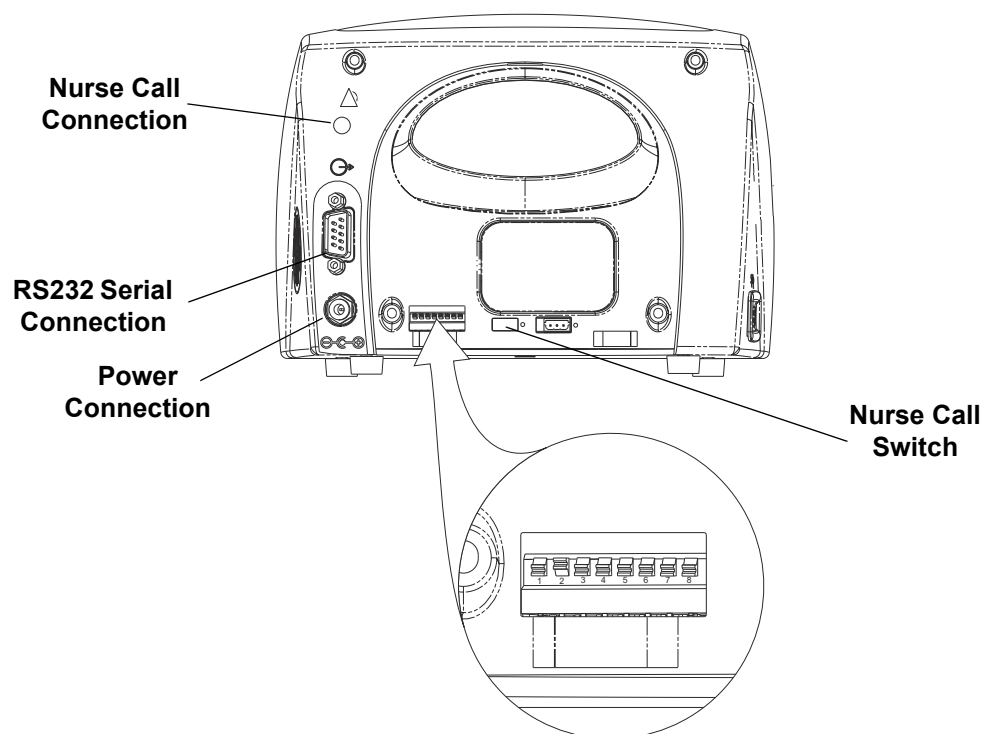

**Figure 3: Monitor Rear View**

---

**NOTE:** It is the user's responsibility to implement the interface between the Nurse Call system and the Avant 9600, and to adequately test the interface between the Avant 9600 and the Nurse Call system to ensure operation.

---

## Alarms and Limits



**CAUTION:** Review all limits to ensure they are appropriate for the patient.



**CAUTION:** Setting alarm limits to extremes can render the alarm system useless.

The intended operator's position for correctly perceiving a visual alarm signal and its priority is 1 meter (3.3 feet), per IEC 60601-1-8.

### High Priority Alarms

High priority alarms require immediate attention to the patient. High priority alarms are indicated with rapidly blinking red LEDs in sync with the Main Alarm LED, when alarm limits are met or exceeded. Low perfusion is indicated by a red segment on the Pulse Strength Bar Graph LED.

High priority alarms are: 3 beeps, pause, 2 beeps and a 10-second pause. This sequence repeats until the alarm is cleared or silenced. The following table describes the default settings, adjustment ranges and intervals.

**Table 7: High Priority Alarms**

High Priority Alarm Description	Default	Adjustment Options	Adjustment Interval
SpO <sub>2</sub> Upper Alarm Limit	Off	Off, 80 to 100	1% SpO <sub>2</sub>
SpO <sub>2</sub> Lower Alarm Limit	85%	Off, 50 to 95	1% SpO <sub>2</sub>
Pulse Upper Alarm Limit	200 BPM	Off, 75 to 275	5 BPM
Pulse Lower Alarm Limit	50 BPM	Off, 30 to 110	5 BPM
Low Perfusion Alarm Red segment on Pulse Strength Bar Graph indicates low patient perfusion.			

### Medium Priority Alarms

Medium priority alarms signal potential problems with the equipment or other non-life-threatening situations. Medium priority alarms are indicated with slowly blinking amber displays on the Main alarm LED and the appropriate indicators or numeric displays. An error code may display to identify the error source. See table in Error Code Section.

Medium priority alarms are: 3 beeps and a 25-second pause. This sequence repeats until the alarm is cleared or silenced. The following table describes alarm conditions and visual indicators.

**Table 8: Medium Priority Alarms**

Alarm Condition	Visual Indicator
Low Battery Alarm	Battery LED blinks in sync with Main Alarm LED.

**Table 8: Medium Priority Alarms (Continued)**

Alarm Condition	Visual Indicator
Sensor Alarm	Pulse Oximeter Sensor LED blinks in sync with Main Alarm LED
Other Equipment Alarms	Amber error code appears in main display area.

## Watchdog Alarms

Watchdog alarms are loud, two-tone, steadily beeping signals that indicate a hardware or software malfunction. When a watchdog alarm is activated, it can be cleared by shutting down the device. If the watchdog alarm does not clear, remove the battery and contact your distributor or Nonin Technical Service.

## Informational Tones

Informational tones are at startup/initialization (speaker verification) and the pulse rate tone (which changes in pitch with SpO<sub>2</sub> values). They are typically single “beeps” or a series of 3 “beeps.”

## Reviewing Setting and Changing Alarm Limits

**NOTE:** Alarm limits reset themselves to default values each time the device is turned on, unless the device is in Patient Security mode. In Patient Security mode, alarm limits and volumes cannot be adjusted; they can only be viewed.

### SpO<sub>2</sub> and/or Pulse Alarm Limits

- Press the Alarm Limits button and check the following:
  - The LEDs to the right of the Alarm Limits button are illuminated. The upper LED indicates the upper alarm limit and the lower LED indicates the lower alarm limit.
  - The current setting appears in the %SpO<sub>2</sub> display.
- The limits can be adjusted by using the Plus (+) or Minus (-) buttons until the appropriate limits are displayed.

**NOTE:** The Alarm Limits button allows the user to manually exit this function or you may wait 10 seconds for the device to automatically exit.

### Pulse and Alarm Volumes

- Press the Volume button once to display the current alarm volume, and a second time to display the current pulse volume.
- Use the Plus (+) or Minus (-) buttons to adjust the alarm or pulse volumes.

**NOTE:** The volume button allows the user to manually exit this function or you may wait 10 seconds for the device to automatically exit.

## Serial Output Rates

1. Simultaneously press and hold the Time/Date and Volume buttons for 3 seconds.
2. Use the Plus or Minus buttons to adjust the serial output to the appropriate rate. The selectable output rates are as follows:
  - SEr Pod = Print-on-Demand
  - SEr 001 = every second (factory default rate)
  - SEr 030 = every 30 seconds
  - SEr 060 = every minute
  - SEr 300 = every 5 minutes
  - SEr 600 = every 10 minutes
  - SEr 900 = every 15 minutes
3. The Serial mode will exit automatically after 10 seconds with no activity.

---

**NOTE:** Each time the device is turned on, the previous serial output rate is retained.

---

## Silencing Alarms

To silence alarms for two minutes, press the Alarm Silence button.

To permanently silence all alarms, Option Switch 1 must be placed in the UP position. This allows the Alarm Volume to be set to zero. The Alarm Silence LED will remain lit when the alarm volume is set less than 45 dB.

<p><b>WARNING:</b> To comply with relevant product safety standards, ensure that all alarm volumes are set appropriately and are audible in all situations. Do not cover or otherwise hinder any speaker openings.</p>
--

## Recalling Previous Settings

The Avant 9600 allows the operator to recall settings in use when the device was turned off:

- SpO<sub>2</sub> high and low alarm limits
- Pulse rate high and low alarm limits
- Alarm volume settings
- Informational tone volume settings

Previous user-defined settings can be recalled by either:

- Simultaneously pressing and holding the Alarm Limits and Minus buttons for 3 seconds while the device is on,

or

- By pressing and holding both the Alarm Limits and ON/STANDBY buttons when turning on the device.



## Locked and Unlocked Alarms

The Avant 9600 allows users to switch between Locked or Unlocked Alarms with Option Switch 3, located under the back cover. Unlocked alarms (Option Switch 3 in the DOWN position) is the default.

When the device is in Unlocked Alarms, the Main Alarm LED and the exceeded alarm value will flash, and the audible alarm will sound until the alarm condition is no longer present.

In Locked Alarms, the audible and visual alarm will continue to signal, until the alarm is cleared or silenced, by pressing the Alarm Silence button.

---

**NOTE:** High Priority (Patient Alarms) may be locked or unlocked; Medium Priority (Equipment Alarms) are always unlocked.

---

## Patient Security Mode

When the Patient Security mode is enabled, users cannot change SpO<sub>2</sub> or Pulse Rate limits but it is still possible to view limits. In Patient Security mode, users cannot view or set the alarm volume, pulse volume, time and date, or serial output rate.

When the device is turned on in Patient Security mode, the software revision displays, followed by PS\_dFL, and 3 beeps are sounded. The upper alarm limits are then displayed, followed by the lower alarm limits.

---

### NOTES:

- Patient memory cannot be cleared when the device is in Patient Security mode.
  - Patient Security mode is not disabled when the device is turned off.
  - Patient Security retains limits when the device is turned off.
- 

## Viewing and Changing Patient Security Mode

To access Patient Security mode, press and hold both the Alarm Limits and Time/ Date buttons for 5 seconds. The current Patient Security mode displays in green on the Numeric LEDs:

- “111 111” (enabled mode) displays when Patient Security is on.
- “000 000” (disabled mode) displays when Patient Security is off.

To change Patient Security mode, press the Volume button while the mode is displayed. The new Patient Security mode (Enabled or Disabled) is then displayed in amber on the Numeric LEDs.

---

**NOTE:** Alarm limits cannot be changed when the device is in Patient Security mode. Patient Security mode prevents accidental changes to critical limits.

---

## Error Codes

This device includes error codes that indicate error conditions. The following table describes the error codes for the Avant 9600.

**Table 9: Error Codes**

Error Code	Description
E01	Stuck Button (Holding button down more than 30 seconds)
E02	Sound Module Fault
E03	Sound Module Communications
E04	Oximeter Module Communications
E05	Display Module Fault
E06	External Flash Memory Alarm (Memory Non-functional)
E08	ISR Alarm
E09	External Flash Memory Alarm (Patient Data Storage/Retrieval)
E10	External Flash Memory Alarm (Settings Data)

To correct error conditions, perform the following steps or see the “Clearing Error Codes 06, 08, or 10” section below:

1. Turn the device off and then back on again to remove the error code.
2. If the error continues, disconnect all power (AC and battery), and then reconnect the power and turn the device back on.
3. If the error is not cleared, note the error code and contact Nonin Technical Service at (800) 356-8874 (USA and Canada), +1 (763) 553-9968, or +31 (0)13 - 79 99 040 (Europe).

### Clearing Error Codes 06, 08, or 10

Error codes 06, 08, and 10 will not clear when the device is turned off and then back on again. To clear these codes, follow the steps below. Please read through the instructions before beginning.

1. Press and hold the Plus (+) and Minus (-) buttons at the same time while momentarily pressing the ON/STANDBY button.
2. Continue holding Plus and Minus until the numerical display shows  $\frac{0000}{0000}$ . Release Plus and Minus.
3. Before the revision level (r) displays, press and hold the Alarm Silence button.
4. Continue holding Alarm Silence until dnE CLr displays. Release Alarm Silence button.
5. To use the device, turn it off and then on again using the ON/STANDBY button. If error has not cleared, contact Nonin Technical Service.

# Memory and Data Output Features

## Memory Features

Model 9600 collects and stores a minimum of 115 hours of SpO<sub>2</sub> and pulse rate data.

Data may be downloaded with Nonin's nVISION data management software.

The memory in the device functions as an "endless loop" tape. When the memory fills up, the device overwrites the oldest data with the new data.

Each time the device is turned on, the current time/date information (if the clock is set properly) is stored in memory, starting a new data collection. Only data collections greater than one minute in length are stored in memory.

Patient SpO<sub>2</sub> and pulse rate are sampled every 2 seconds. Every 4 seconds, the high and low values of the 4-second sample period are stored. Oxygen saturation values are stored in 1% increments in a range of 0 to 100%.

The stored pulse rate ranges from 18 to 300 pulses per minute (BPM). The stored values are in increments of 1 pulse per minute in a range of 18 to 200 pulses per minute, and in increments of 2 pulses per minute in a range of 201 to 300 pulses per minute (BPM).

**WARNING: The battery pack must be installed at all times while the device is operating—even when operating on AC power. Do NOT use the device without batteries. The audible alarms and memory will not function if batteries are removed from the device.**

## Using nVISION Data Management Software

The Avant 9600 has a Memory Download feature allowing stored data to be transferred to Nonin's nVISION data management software for analysis. When downloading data, use the following procedure:

1. With the device turned off, attach the null modem cable to the RS232 connector port of the device and to the back of your computer.
2. With the device turned off, simultaneously press and hold the Time/Date button and the ON/STANDBY button. All LEDs will illuminate briefly. PL y bAC will appear in the SpO<sub>2</sub> and Pulse Rate display areas. This message indicates the device is now in Download mode.
3. The PL y bAC message will disappear after a few seconds, indicating memory download is complete; larger files might take several minutes. Pressing the ON/STANDBY button will exit Download mode.
4. A CLr no message will be displayed, and 3 beeps will sound.
5. Memory Clear (OPTIONAL):
  - Simultaneously press and hold the ON/STANDBY button and the Plus (+) button to select CLr yES.
  - Press the ON/STANDBY button for the next prompt.
  - Use the Plus (+) and/or Minus (-) buttons to select dEL yES if desired.

- Press the ON/STANDBY button for the next prompt.
  - **dnE CLR** confirms that the memory is clear.
6. Press the ON/STANDBY button to return to normal operation.
  7. For more information about using nVISION, refer to nVISION's online help.

---

**NOTES:**

- Patient memory cannot be cleared when the Avant 9600 is in Patient Security mode.
  - Selecting **yES** from the **dEL** window will permanently delete the device's memory.
- 

## ***Serial Patient Data Outputs***

The Avant 9600 features real-time and Print-on-Demand options. All reports include a header with the model number, time, and date information.

Real-time data output is provided by connecting a null modem cable to the RS232 connector port and the receiving computer. Data is sent in an ASCII serial format at 9600 baud with 8 data bits, 1 start bit, and 2 stop bits; each line is terminated by CR/LF.

### **Print-on-Demand Output**

Avant 9600 allows Print-on-Demand if the system is connected to a printer. This operation is performed by pressing the ON/STANDBY button, as needed. The device features a Print-on-Demand option, allowing users to output data each time the ON/STANDBY button is pressed.

### **Real-Time Patient Data Output**

Data output is sent once per second in one of the following formats:

- If option switch 8 is in the UP position, the data will be displayed as follows:  
**SPO<sub>2</sub>=XXX HR=YYY F**  
where XXX and YYY are the SpO<sub>2</sub> and pulse rate values and F signifies "output: fast".
- If option switch 8 is in the DOWN position, the data will be displayed as follows:  
**SPO<sub>2</sub>=XXX HR=YYY**  
where XXX and YYY are the SpO<sub>2</sub> and pulse rate values as selected by option switch 2.

---

**NOTES:**

- To insert an event marker, press the ON/STANDBY button.
  - The serial output rate is automatically returned to its previous setting upon device startup.
-

## Connecting the Device into a Medical System

Incorporating the device into a medical system requires the integrator to identify, analyze, and evaluate the risks to patient, operators, and third parties. Subsequent changes to the medical system after device integration could introduce new risks and will require additional analysis. Changes to the medical system that must be evaluated include:

- Changing the system configuration
- Adding devices to or disconnecting devices from the system
- Updating or upgrading equipment connected to the system

Issues resulting from user-initiated system changes may include corruption or loss of data.

---

### NOTES:

- Use of a multiple-socket outlet with multiple devices results in a Medical Electrical System.
- When using the serial port to connect the device to other equipment, follow each device's cleaning instructions.
- Verify all equipment connected to the device is suitable for the patient's environment.



**CAUTION:** Failure of a network data coupling (serial cable/connectors/wireless connections) will result in loss of data transfer.

## Using with Philips VueLink

The Avant 9600 supports the Phillips VueLink Open Interface (V.O.I.), and will communicate with a Philips VueLink Auxiliary Plus Type B module (product number M1032A#A05). Refer to the operator's manual for additional instructions and information.

### Connecting to the VueLink Module

The 9600 is connected with the VueLink Module via a Philips cable (product number M1032A#K6C), which connects to the RS-232 Serial Connection on the 9600. The device detects the VueLink connection and begins communication automatically. Disconnecting the cable or turning off the device will stop communications.


When the 9600 is connected to the VueLink module and interfaced to a compatible Philips multiparameter monitor (contact Philips for compatibility), the following data will be sent for display:

- plethysmographic waveform
- SpO<sub>2</sub> data, as displayed on the oximeter
- pulse rate data, as displayed on the oximeter
- high and low SpO<sub>2</sub> and pulse rate alarm limits
- alarm conditions (for both patient and equipment alarms)

---

### NOTES:

- When dashes are displayed for SpO<sub>2</sub> or pulse rate data, the oximeter identifies that data as "not available" to the VueLink module.
  - Limits set to "OFF" on the 9600 are reported to the VueLink module as the maximum values of the upper limits and the minimum values of the lower limits.
-

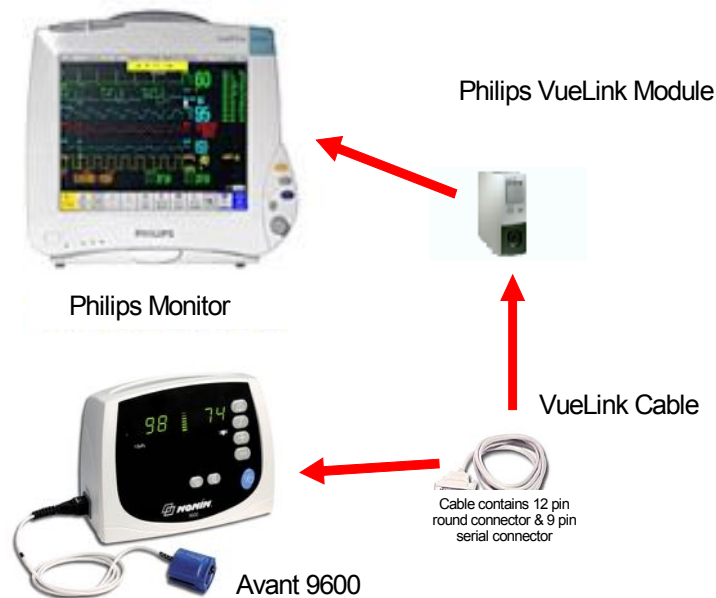

**Figure 4: Avant 9600 Connection to Philips Monitor**

## Patient Alarms

Only one alarm condition can be reported to the VueLink at a time. Because of this, patient alarm conditions are assigned priorities—with only the highest priority alarm displayed at any one time. Alarms are sent to the VueLink even when the oximeter's alarms are silenced. Alarm priorities are assigned as follows:

- SpO<sub>2</sub> Low Limit
- Pulse Rate High Limit
- Pulse Rate Low Limit
- SpO<sub>2</sub> High Limit
- Low Perfusion

## Equipment Alarms

VueLink displays equipment alarms as “inoperatives.” Only one inoperative condition can be reported to the VueLink at a time. Because of this, inoperatives are assigned priorities—with only the highest priority displayed at any one time. Inoperatives are sent to the VueLink even when the oximeter's alarms are silenced. Inoperative priorities are assigned as follows:

- No SpO<sub>2</sub> Sensor
- SpO<sub>2</sub> Sensor Fault
- No SpO<sub>2</sub> Data
- No Pulse Data
- Low Battery

The following text strings, associated with the device, are sent through the VueLink module for display on the multiparameter monitor:

Parameter	Displayed Text
Displayed High SpO <sub>2</sub> Limit	HiSpO <sub>2</sub>
Displayed Low SpO <sub>2</sub> Limit	LoSpO <sub>2</sub>
Displayed High Pulse Rate Limit	Hi PR
Displayed Low Pulse Rate Limit	Lo PR
SpO <sub>2</sub> High Limit Alarm	SpO <sub>2</sub> : HIGH
SpO <sub>2</sub> Low Limit Alarm	SpO <sub>2</sub> : LOW
Pulse Rate High Limit Alarm	PULSE: HIGH
Pulse Rate Low Limit Alarm	PULSE: LOW
Low Perfusion Alarm	LOW PERFUSION
Sensor Disconnect	NO SpO <sub>2</sub> SENSOR
Sensor Fault	SpO <sub>2</sub> SENSOR
No SpO <sub>2</sub> Data Available	NO SpO <sub>2</sub> Data
No Pulse Data Available	NO Pulse Data
Low Battery	Battery: Pulse Ox

## Care and Maintenance

The Avant 9600 requires no calibration or periodic maintenance other than battery replacement. The device's expected service life is 5 years.

Do not attempt to open the case or repair the electronics. Opening the case will damage the device and void the warranty. If the device is not functioning properly, see "Troubleshooting."

The Oxitest<sup>Plus7</sup> by Datrend Systems, Inc. can be used to verify operation of the pulse oximeter.

### *Cleaning the Model 9600*

Clean the Avant 9600 with a soft cloth dampened with isopropyl alcohol. Do not pour or spray any liquids onto the device, and do not allow any liquid to enter any openings in the device. Allow the device to dry thoroughly before reusing it.



**CAUTION:** Do not autoclave or immerse this device in liquid or use caustic or abrasive cleaning agents.

Refer to the pulse oximeter sensor Instructions for Use for cleaning information.



## Parts and Accessories

For more information about Nonin parts and accessories:

- See the Parts and Accessories List on the Operator's Manual CD.
- Contact your distributor or Nonin at (800) 356-8874 (USA and Canada), +1 (763) 553-9968, or +31 (0)13 - 79 99 040 (Europe).
- Visit [www.nonin.com](http://www.nonin.com).

# Troubleshooting

Problem	Possible Cause	Possible Solution
<b>Device will not activate.</b>	The device has no power.	Plug in the AC power supply.
	The battery pack is connected incorrectly.	Check the battery pack connector orientation.
	The battery pack is not charged.	Plug in the device AC power supply to charge the battery pack. New battery packs must complete one charge/discharge/recharge cycle before the Battery LED displays the actual capacity.
	The battery pack will not charge.	Contact Nonin Technical Service for repair or replacement.
<b>Unable to obtain a green pulse display on the bar graph.</b>	The patient pulse strength is low.	Reposition the sensor or apply the sensor to a different finger, and keep the sensor motionless for at least 10 seconds; warm the sensor application area.
	Circulation is reduced due to excess pressure on the sensor (between the sensor and a hard surface) after inserting finger.	Identify the source of the pressure. Allow the hand to rest comfortably without squeezing or pressing the sensor on a hard surface.
	The sensor is applied incorrectly.	Apply the sensor according to the Instructions for Use provided with the sensor.
	Possible interference from one of the following sources: <ul style="list-style-type: none"> <li>• arterial catheter</li> <li>• blood pressure cuff</li> <li>• electrosurgical procedure</li> <li>• infusion line</li> </ul>	Reduce or eliminate any interference.
	The red LED is not illuminated in the finger insertion area.	Contact Nonin Technical Service.
	There is excessive ambient light.	Shield the sensor from the light source.

Problem	Possible Cause	Possible Solution
<b>Unable to obtain a green pulse display on the bar graph. (continued)</b>	The sensor is applied to a polished or artificial fingernail.	Apply the sensor to a finger without fingernail polish or an artificial nail.
	Excessive patient motion.	Reduce patient motion.
<b>A dash (-) appears in the %SpO<sub>2</sub> display.</b>	An inadequate signal from the finger is being detected.	Reposition the sensor or apply the sensor to a different finger, and keep the sensor motionless for at least 10 seconds. Warm the sensor application site.
	The finger was removed from the sensor.	Reposition the sensor or apply the sensor to a different finger, and keep the sensor motionless for at least 10 seconds. Warm the sensor application site.
	The device is not functioning.	Contact Nonin Technical Service.
<b>An error code appears in the display area.</b>	The device encountered an error.	See Error Codes table, "Clearing Error Codes 06, 08, or 10" section, or contact Nonin Technical Service.
<b>The unit is in Alarm mode, but no audible alarms can be heard.</b>	The 2-minute Alarm Silence button is activated.	Press the Alarm Silence button to activate alarm volume, or wait for 2 minutes; and alarm tones will automatically activate.
	Option switch 1 is in the UP position, and the unit's volume is set to zero.	Adjust the alarm volume, or return option switch 1 to the DOWN position if audible alarms are required.
<b>The device does not record data.</b>	The battery is low.	Recharge the battery.
	The battery is missing.	Contact your distributor or Nonin Technical Service.

If these solutions do not correct the problem, please contact Nonin Customer Support at (800) 356-8874 (USA and Canada), +1 (763) 553-9968, or +31 (0)13 - 79 99 040 (Europe).

## Service, Support, and Warranty

A return authorization number is required before returning any product to Nonin. To obtain this return authorization number, contact Nonin Technical Service:

**Nonin Medical, Inc.**  
13700 1st Avenue North  
Plymouth, Minnesota 55441-5443 USA

(800) 356-8874 (USA and Canada)  
+1 (763) 553-9968 (outside USA & Canada)  
Fax: +1 (763) 553-7807  
E-mail: [technicalservice@nonin.com](mailto:technicalservice@nonin.com)

**Nonin Medical B.V.**  
Prins Hendriklaan 26  
1075 BD Amsterdam, Netherlands

+31 (0)13 - 79 99 040 (Europe)  
Fax: +31 (0)13 - 79 99 042  
E-mail: [technicalserviceintl@nonin.com](mailto:technicalserviceintl@nonin.com)

[nonin.com](http://nonin.com)

## Warranty

NONIN MEDICAL, INCORPORATED, (Nonin) warrants to the purchaser, for a period of one year from the date of purchase, each Avant 9600 battery pack. Nonin warrants the pulse oximetry module of the Avant 9600 for a period of three years from the date of purchase. Extended warranties are available on most Nonin pulse oximeter models. Please consult your local Nonin distributor for additional information.

Nonin shall repair or replace any Avant 9600 found to be defective in accordance with this warranty, free of charge, for which Nonin has been notified by the purchaser by serial number that there is a defect, provided said notification occurs within the applicable warranty period. This warranty shall be the sole and exclusive remedy by the purchaser hereunder for any Avant 9600 delivered to the purchaser which is found to be defective in any manner, whether such remedies be in contract, tort, or by law.

This warranty excludes cost of delivery to and from Nonin. All repaired devices shall be received by the purchaser at Nonin's place of business. Nonin reserves the right to charge a fee for a warranty repair request on any Avant 9600 that is found to be within specifications.

The Avant 9600 is a precision electronic instrument and must be repaired by knowledgeable and specially trained Nonin personnel only.

Accordingly, any sign or evidence of opening the Avant 9600, field service by non-Nonin personnel, tampering, or any kind of misuse or abuse of the Avant 9600, shall void the warranty in its entirety. All non-warranty work shall be done according to Nonin standard rates and charges in effect at the time of delivery to Nonin.



DISCLAIMER/EXCLUSIVITY OF WARRANTY:

THE EXPRESS WARRANTIES SET FORTH IN THIS MANUAL ARE EXCLUSIVE AND NO OTHER WARRANTIES OF ANY KIND, WHETHER STATUTORY, WRITTEN, ORAL, OR IMPLIED, INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, SHALL APPLY.

## Technical Information

**NOTE:** This product complies with ISO 10993-1, Biological Evaluation of Medical Devices Part 1: Evaluation and Testing.



**CAUTION:** A functional tester cannot be used to assess the accuracy of a pulse oximeter monitor or sensor.



**CAUTION:** All parts and accessories connected to the serial port of this device must be certified according to at least IEC Standard EN 60950 or UL 1950 for data-processing equipment.



**CAUTION:** Portable and mobile RF communications equipment can affect medical electrical equipment.

## Manufacturer's Declaration

Refer to the following table for specific information regarding compliance to IEC 60601-1-2 for this device.


**Table 10: Electromagnetic Emission**

Emissions Test	Compliance	Electromagnetic Environment—Guidance
<i>This device is intended for use in the electromagnetic environment specified below. The customer and/or user of this device should ensure that it is used in such an environment.</i>		
RF Emissions CISPR 11	Group 1	This device uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF Emissions CISPR 11	Class B	This device is suitable for use in all establishments, including domestic and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic Emissions IEC 61000-3-3	N/A	
Voltage Fluctuations/ Flicker Emissions IEC 61000-3-3	N/A	

**Table 11: Electromagnetic Immunity**

Immunity Test	IEC 60601 Test Level	Compliance Level	Electromagnetic Environment—Guidance
<i>This device is intended for use in the electromagnetic environment specified below. The customer and/or user of this device should ensure that it is used in such an environment.</i>			
Electrostatic Discharge (ESD) IEC 61000-4-2	±6 kV contact ±8 kV air	±6 kV contact ±8 kV air	Floors should be wood, concrete, or ceramic tile. If floors are covered with synthetic material, relative humidity should be at least 30%.
Electrical Fast Transient/Burst IEC 61000-4-4	±2 kV for power supply lines ±1 kV for input/output lines	±2 kV ±1 kV	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	±1 kV differential mode ±2 kV common mode	±1 kV ±2 kV	Mains power quality should be that of a typical commercial or hospital environment.
Voltage dips, short interruptions, and voltage variations on power supply input lines IEC 61000-4-11	±5% $U_T$ (>95% dip in $U_T$ ) for 0.5 cycle ±40% $U_T$ (60% dip in $U_T$ ) for 5 cycles ±70% $U_T$ (30% dip in $U_T$ ) for 25 cycles <5% $U_T$ (>95% dip in $U_T$ ) for 5 sec.	±5% $U_T$ (>95% dip in $U_T$ ) for 0.5 cycle ±40% $U_T$ (60% dip in $U_T$ ) for 5 cycles ±70% $U_T$ (30% dip in $U_T$ ) for 25 cycles <5% $U_T$ (>95% dip in $U_T$ ) for 5 sec.	Mains power quality should be that of a typical commercial or hospital environment.
Power Frequency (50/60 Hz) Magnetic Field IEC 61000-4-8	3 A/m	3 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.
<b>NOTE:</b> $U_T$ is the AC mains voltage before application of the test level.			

**Table 12: Guidance and Manufacturer's Declaration—Electromagnetic Immunity**

Immunity Test	IEC 60601 Test Level	Compliance Level	Electromagnetic Environment—Guidance
<i>This device is intended for use in the electromagnetic environment specified below. The customer and/or user of this device should ensure that it is used in such an environment.</i>			
Portable and mobile RF communications equipment should be used no closer to any part of the device, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.			
Conducted RF IEC 61000-4-6	3 Vrms 150 kHz to 80 MHz	3 Vrms	<b>Recommended Separation Distance</b> $d = 1.17 \sqrt{P}$ $d = 1.17 \sqrt{P}$ $d = 2.33 \sqrt{P}$ where $P$ is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and $d$ is the recommended separation distance in meters (m). Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey <sup>a</sup> , should be less than the compliance level in each frequency range. <sup>b</sup> Interference may occur in the vicinity of equipment marked with the following symbol: 
Radiated RF IEC 61000-4-3	3 V/m 80 MHz to 2.5 GHz	3 V/m	

a. Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the device is used exceeds the applicable RF compliance level above, the device should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating the device.

b. Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3 V/m.

**NOTES:**

- At 80 MHz and 800 MHz, the higher frequency range applies.
- These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects, and people.

**Table 13: Recommended Separation Distances**

This table details the recommended separation distances between portable and mobile RF communications equipment and this device.			
<i>This device is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. Users of this device can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communication equipment (transmitters) and the device as recommended below, according to maximum output power of the communications equipment.</i>			
	<b>Separation Distance According to Frequency of Transmitter</b>		
Rated Maximum Output Power of Transmitter W	150 kHz to 80 MHz $d = 1.17\sqrt{P}$	80 MHz to 800 MHz $d = 1.17\sqrt{P}$	800 MHz to 2.5 GHz $d = 2.33\sqrt{P}$
0.01	0.12	0.12	0.23
0.1	0.37	0.37	0.74
1	1.2	1.2	2.3
10	3.7	3.7	7.4
100	12	12	23
For transmitters rated at a maximum output power not listed above, the recommended separation distance d in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.			
<b>NOTES:</b> 1. At 80 MHz and 800 MHz, the higher frequency range applies. 2. These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects, and people.			

## Equipment Response Time

If the signal from the sensor is inadequate, the last measured SpO<sub>2</sub> and pulse rate values freeze for 10 seconds and are then replaced with dashes.

SpO <sub>2</sub> Values	Average	Latency
Standard/Fast Averaged SpO <sub>2</sub>	4 beat exponential	2 beats
Extended Averaged SpO <sub>2</sub>	8 beat exponential	2 beats


Pulse Rate Values	Response	Latency
Standard/Fast Averaged Pulse Rate	4 beat exponential	2 beats
Extended Averaged Pulse Rate	8 beat exponential	2 beats

Equipment Delays	Delay
Display Update Delay	1.5 seconds
Alarm Signal Generation Delay	0 seconds

### Example - SpO<sub>2</sub> Exponential Averaging

SpO<sub>2</sub> decreases 0.75% per second (7.5% over 10 seconds)

Pulse Rate = 75 BPM

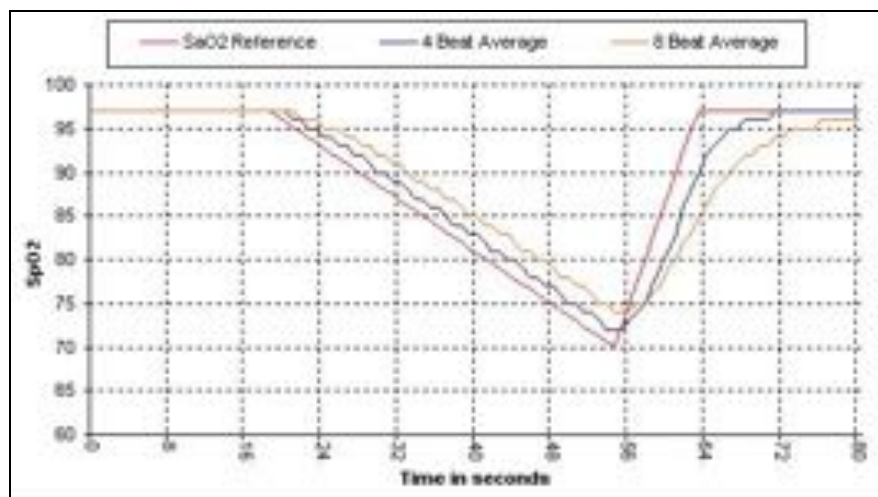

Specific to this example:

- The response of the 4-beat average is 1.5 seconds.
- The response of the 8-beat average is 3 seconds.

## **Testing Summary**

SpO<sub>2</sub> accuracy, and low perfusion testing were conducted by Nonin Medical, Inc., as described below:

### **SpO<sub>2</sub> Accuracy Testing**

During motion and no-motion conditions at an independent research laboratory, SpO<sub>2</sub> accuracy testing is conducted during induced hypoxia studies on healthy, male and female, non-smoking, light- to dark-skinned subjects that are 18 years of age and older. The measured arterial hemoglobin saturation value (SpO<sub>2</sub>) of the sensors is compared to arterial hemoglobin oxygen (SaO<sub>2</sub>) value, determined from blood samples with a laboratory co-oximeter. The accuracy of the sensors in comparison to the co-oximeter samples measured over the SpO<sub>2</sub> range of 70 - 100%. Accuracy data is calculated using the root-mean-squared ( $A_{rms}$  value) for all subjects, per ISO 80601-2-61, Medical Electrical Equipment—Particular requirements for the basic safety and essential performance of pulse oximeter equipment for medical use.

### **Pulse Rate Motion Testing**

This test measures pulse rate oximeter accuracy with motion artifact simulation introduced by a pulse oximeter tester. This test determines whether the oximeter meets the criteria of ISO 80601-2-61 for pulse rate during simulated movement, tremor, and spike motions.

### **Low Perfusion Testing**

This test uses an SpO<sub>2</sub> Simulator to provide a simulated pulse rate, with adjustable amplitude settings at various SpO<sub>2</sub> levels for the oximeter to read. The oximeter must maintain accuracy in accordance with ISO 80601-2-61 for heart rate and SpO<sub>2</sub> at the lowest obtainable pulse amplitude (0.3% modulation).

## **Principles of Operation**

Pulse oximetry is a non-invasive method that passes red and infrared light through perfused tissue and detects the fluctuating signals caused by arterial pulses. Well-oxygenated blood is bright red, while poorly oxygenated blood is dark red. The pulse oximeter determines functional oxygen saturation of arterial hemoglobin (SpO<sub>2</sub>) from this color difference by measuring the ratio of absorbed red and infrared light as volume fluctuates with each pulse.

## Specifications

### Oximeter

<b>Oxygen Saturation Display Range:</b>	0 to 100% SpO <sub>2</sub>
<b>Pulse Rate Display Range:</b>	18 to 300 pulses per minute (BPM)
<b>Displays:</b>	<p>Numeric Displays: 3-digit LEDs, Tricolor (red, green, amber)</p> <p>Pulse Strength Bar Graph LED: Tri-color LED segments</p>
<b>Accuracy - Sensors:</b>	Declared accuracy data for compatible sensors can be found in Nonin's Sensor Accuracy document.
<b>Measurement Wavelengths and Output Power*:</b>	<p>Red 660 nanometers @ 0.8 mW max. avg.</p> <p>Infrared 910 nanometers @ 1.2 mW max. avg.</p>
<b>Alarm Volume Range:</b>	53–74 dBA
<b>Informational Tone Volume Range:</b>	50–70 dBA
<b>Altitude (Operating):</b>	Up to 12,000 meters (40,000 feet)

\* This information is especially useful for clinicians performing photodynamic therapy.

## System

<b>Temperature:</b>	<p>Operating: 32 °F to 122 °F (0 °C to 50 °C)</p> <p>Storage/Transportation: -40 °F to 158 °F (-40 °C to 70 °C)</p>
<b>Humidity:</b>	<p>Operating: 10 % to 90 % noncondensing</p> <p>Storage/Transportation: 10 % to 95 % noncondensing</p>
<b>Power Requirements:</b>	7.2 volt battery pack (6 cells) or 12 VDC 1.5A AC power supply
<b>Battery Life:</b>	<p>Operating: Minimum 12 hours of continuous operation with a fully charged battery pack</p> <p>Storage: 27 days</p> <p>Battery Recharge Time: 4 hours</p>
<b>Dimensions:</b>	<p>5.5" H x 7.25" W x 4.5" D</p> <p>(14 cm x 18.4 cm x 11.4 cm)</p>
<b>Weight:</b>	2.2 lbs (1 kilogram)
<b>Memory:</b>	115 hours minimum
<b>Classifications per IEC 60601-1 / CAN/CSA-C22.2 No. 601.1/ UL60601-1:</b>	
<p>Type of Protection: Class II (on AC power with MPP30 power supply).</p> <p>Internally powered (on battery power)</p>	
Degree of Protection: Type BF-Applied Part	
Enclosure Degree of Ingress Protection: IP22	
Mode of Operation: Continuous	

## Nurse Call

<b>Voltage</b>	30 VAC or DC (non-polarized), maximum
<b>Current</b>	100mA continuous (maximum)
<b>Output Impedance</b>	30 ohms (maximum)
<b>Ground Reference</b>	Isolated ground
<b>Electrical Isolation</b>	1500 VDC
<b>Output</b>	Normally Open or Normally Closed; switch selectable
<b>Output Connector Type</b>	0.141" phone jack
<b>Serial Port Pin-out</b>	
<b>PIN #</b>	<b>RS-232 FUNCTION</b>
<b>1</b>	Device Carrier Detect
<b>2</b>	Received Data
<b>3</b>	Transmitted Data
<b>4</b>	Data Terminal Ready
<b>5</b>	Signal Ground
<b>6</b>	Data Set Ready
<b>7</b>	Request to Send
<b>8</b>	Clear to Send
<b>9</b>	Ring Indicator